SHOCK OWNER'S MANUAL PODIUM X - LSC ATV APPLICATIONS



TABLE OF CONTENTS

CONGRATULATIONS!	1
CONSUMER SAFETY	1
UNDERSTANDING THE PODIUM X	2
READING THE SPRING RATE	4
SPRING ORIENTATION	4
CHANGING SPRINGS (SINGLE SPRING)	5
CHANGING SPRINGS (DUAL SPRING)	6
MOUNTING THE PODIUM X	7
MOUNTING THE RESERVOIR	8
SETTING UP THE PODIUM X	9
MEASURING AND SETTING SAG	9
ADJUSTING SPRING PRELOAD (SINGLE AND DUAL SPRING)	12
ADJUSTING SPRING CROSSOVER (DUAL SPRING ONLY)	13
TUNING THE PODIUM X	16
TUNING THE PODIUM X GENERAL GUIDELINES	
TUNING THE PODIUM X	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE CROSSOVER POINT STORME DUINT	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE CROSSOVER POINT REBOUND DAMPING CONDECTION DUPLY	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE CROSSOVER POINT REBOUND DAMPING COMPRESSION DAMPING.	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE (ROSSOVER POINT REBOUND DAMPING COMPRESSION DAMPING. INSPECTING AND MAINTAINING THE PODIUM X	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE CROSSOVER POINT REBOUND DAMPING COMPRESSION DAMPING. INSPECTING AND MAINTAINING THE PODIUM X SHOCK REBUILD	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE CROSSOVER POINT REBOUND DAMPING COMPRESSION DAMPING. INSPECTING AND MAINTAINING THE PODIUM X SHOCK REBUILD QUICK SETUP CHECKLIST	
TUNING THE PODIUM X GENERAL GUIDELINES TUNING RECOMMENDATIONS SPRING FORCE (ROSSOVER POINT REBOUND DAMPING COMPRESSION DAMPING INSPECTING AND MAINTAINING THE PODIUM X SHOCK REBUILD QUICK SETUP CHECKLIST TUNING NOTES	

NOTICE: THE ATV'S PICTURED IN THIS MANUAL MAY OR MAY NOT RESEMBLE YOUR ACTUAL ATV. IN ANY CASE, THE PROCEDURES OUTLINED WILL CORRECTLY ENABLE YOU TO SET UP, MOUNT AND TUNE THE FOX PODIUM X ON YOUR PARTICULAR MODEL.



DENOTES INFORMATION THAT, IF NOT FOLLOWED, CAN CAUSE DAMAGE TO YOUR SHOCK OR LEAD TO SERIOUS INJURY OR DEATH.

DENOTES INFORMATION THAT MAY NOT BE OBVIOUS, OR THAT CAN HELP THE RIDER OUT WITH A DIFFICULT SITUATION.

PODIUM X

 features
 > Lightweight

 > Race-proven oil damping system

 > External rebound damping adjuster

 > External compression damping adjuster

 > 100% rebuildable and revalveable

 > 1-year factory limited warranty

 > Spherical bearing ends

 > 90-day valving guarantee



CONGRATULATIONS!

Thank you for choosing FOX PODIUM X for your ATV. In doing so, you have chosen the finest suspension shock in the world. FOX Racing Shox products are designed, tested and manufactured by the finest professionals in the industry in Santa Cruz County, California, USA.

As a consumer and supporter of FOX Racing Shox products, you need to be aware of the importance of setting up your shock correctly to ensure maximum performance. This manual provides step-by-step instructions of how to setup and maintain your shock. It is a good idea to keep your receipts with this manual, and refer to it for service and warranty issues.

This manual does not contain step-by-step detailed service instructions for a reason: FOX recommends that detailed service be performed by FOX Racing Shox or a qualified suspension professional.

CONSUMER SAFETY



RIDING AN ATV CAN BE DANGEROUS AND CAN RESULT IN DEATH OR SERIOUS INJURY.

Take your responsibility to yourself and others seriously, and heed the following safety tips:

- > Keep your ATV and suspension system in optimal working condition.
- > Wear protective clothing, eye protection and always fasten your helmet before you ride.
- > Know and ride within your limits.

The PODIUM X shock contains a nitrogen charge. The charged portion of the shock should only be opened by a FOX Racing Shox technician or a qualified suspension professional.



OPENING A NITROGEN PRESSURIZED SHOCK CAN BE DANGEROUS AND CAN RESULT IN SERIOUS INJURY OR DEATH.

UNDERSTANDING THE PODIUM X

Your PODIUM X shock absorber sets the industry standard for performance and durability. The PODIUM X has external compression and rebound damping adjusters, as well as spring preload and crossover location adjustments. The PODIUM X contains a high strength 2-inch bore steel body, and a 5/8" chrome damper shaft that is super finished for low-stiction and long steel life. The springs that come on your PODIUM X are customized for your weight, riding style and terrain.



CROSS-SECTION OF PODIUM X

Your PODIUM X shock will either be fitted with dual springs or a single spring, depending on your make of swing-arm and linkage. Different swing-arm and linkage combinations require different spring characteristics to work well.

A single spring shock has a linear spring rate throughout the shock travel. Ride height (sag) adjustments are made by adjusting the spring preload.

A dual spring shock has a main spring (long) and a tender spring (short), which combine to give a softer initial spring rate with a stiffer spring rate deep into travel. The vehicle ride-height (sag) adjustments are made by varying spring preload, the same as the single spring shock (see **ADJUSTING THE SPRING PRELOAD** on page 12). The shock bottoming resistance can be tuned by adjusting the spring "crossover." The spring crossover is the point in the shock travel where the spring rate increases; the default setting is 55% of total shock travel. For information on changing your spring crossover, refer to **ADJUSTING THE SPRING CROSSOVER** on page 13.



Shock Compression

READING THE SPRING RATE



The spring rate is printed directly on the shock spring. The spring above is 8" in free length, has a 2.25" ID and a 300 lbs/in spring rate.

SPRING ORIENTATION

When placing the spring(s) back on the shock body, it is important that the components are assembled in the correct order, especially on the dual-spring model (see picture below).



CHANGING SPRINGS (SINGLE SPRING)

- **STEP 1** Loosen the pinch bolt on the spring preload ring and unthread until the spring freely moves up and down on the shock body.
- **STEP 2** Lift up the spring and remove the spring retainer.



SOME MODELS MAY REQUIRE AN AUTOMOTIVE SPRING COMPRESSOR TO HELP TO COMPRESS THE SPRING AND REMOVE THE SPRING RETAINER. IF IN DOUBT, PLEASE SEND YOUR SHOCK TO AN AUTHORIZED REPAIR CENTER OR QUALIFIED SUSPENSION PROFESSIONAL.

- **STEP 3** Slide the spring and thrust washers off the shock body over the shaft end (eyelet/clevis end).
- **STEP 4** Orient the new spring correctly and slide it onto the shock body.
- **STEP 5** Place the spring retainer back on the shock and under the spring ensuring that the open slot on the spring retainer rests on the flat part of the spring end.
- **STEP 6** Tighten the preload ring approximately four (4) turns to take up any free play of the spring against the retainer and preload ring.
- **STEP 7** Adjust preload according to the **ADJUSTING SPRING PRELOAD** on page 12.

CHANGING SPRINGS (DUAL SPRING)

- **STEP 1** Loosen the pinch bolt and spring preload ring until the springs freely move up and down on the body.
- **STEP 2** Lift up the spring and remove the spring retainer.



SOME MODELS MAY REQUIRE AN AUTOMOTIVE SPRING COMPRESSOR TO HELP TO COMPRESS THE SPRING AND REMOVE THE SPRING RETAINER. IF IN DOUBT, PLEASE SEND YOUR SHOCK TO AN AUTHORIZED REPAIR CENTER OR QUALIFIED SUSPENSION PROFESSIONAL.

- **STEP 3** Slide the main spring, spring coupler, tender spring and thrust washers off the shock body over the shaft end (eyelet/clevis end), taking care to note the order and orientation of the components.
- **STEP 4** Orient the new spring(s) correctly (see **SPRING ORIENTATION** on page 4) and slide the spring assembly onto the body. Take special care to ensure that the preload ring is not on upside-down. (The tender spring should fit snuggly over the preload ring.)
- **STEP 5** Place the spring retainer back on the shock and under the spring ensuring that the open slot on the spring retainer rests on the flat part of the spring end (see **SPRING ORIENTATION** on page 4).
- **STEP 6** Tighten the preload ring approximately four (4) turns to take up any free play of the spring against the retainer and preload ring.
- **STEP 7** Adjust preload according to the **ADJUSTING SPRING PRELOAD** on page 12.

MOUNTING THE PODIUM X

Refer to your ATV's owner's manual for the specific tools required for your ATV brand.

SHOCK FITMENT SHOULD ONLY BE CONDUCTED WHEN THE ATV IS COLD. DO NOT ATTEMPT TO FIT THE SHOCK TO A ATV THAT HAS BEEN RUNNING OR HAS A HOT ENGINE OR EXHAUST. IF YOU MUST CHANGE THE SHOCK ON A HOT ATV, BE SURE TO USE GLOVES AND PROTECTIVE EQUIPMENT.

- **STEP 1** Place the ATV on a workstand.
- **STEP 2** As applicable, remove the seat, side panels, silencer, and subframe/airbox from your ATV. Refer to your ATV's owner's manual for specific information on accessing your rear shock mount.
- **STEP 3** Remove upper and lower shock mounting hardware and any linkage components that are required. Remove the stock shock. Keep the stock nuts, bolts, washers, etc., as you will need these when mounting the PODIUM X.



TAKE NOTE OF THE ORIENTATION AND WIDTHS OF THE STOCK MOUNTING HARDWARE, SUCH AS UPPER & LOWER EYELETS OR CLEVIS MOUNTS. THIS WILL HELP WHEN INSTALLING THE PODIUM X SHOCK AND ITS ACCOMPANYING REDUCER & O-RING SET.

STEP 4 Install the PODIUM X, ensuring that the upper reducers and o-rings are in the correct position (see drawing below).



REFERENCE THE ENCLOSED SETUP SHEET FOR SHOCK ORIENTATION AND MOUNTING THE RESERVOIR.



STEP 5 Install upper and lower shock mounting hardware and appropriate linkage components, and torque according to the specifications listed in your ATV's owner's manual.



IF YOUR SPECIFIC APPLICATION UTILIZES A LOWER CLEVIS MOUNT, A SMALL DROP OF BLUE LOCTITE® ON THE THREAD IS RECOMMENDED DURING INSTALLATION.

- **STEP 6** Re-install seat, side panels, silencer, subframe/airbox, etc., on your ATV.
- **STEP 7** Mount the reservoir and set rider sag on the PODIUM X as indicated in the following sections.

MOUNTING THE RESERVOIR



REFERENCE THE SUPPLEMENTAL SETUP SHEET FOR SHOCK ORIENTATION AND MOUNTING THE RESERVOIR.

Pay careful attention to the routing notes/pictures in the supplemental setup sheet. Care should be taken to make sure the hose does not contact hot exhaust components or any moving suspension parts.

If necessary, use cable ties to hold the hose in place. Excessive heat and vibration will damage the hose and its plastic covering.

Avoid sharp bends in the hose—this may cause damage and result in hose failure.

Do not allow the hose fittings to touch any part of the frame. This will cause damage to the fitting and frame due to engine vibration.

SETTING UP THE PODIUM X

MEASURING AND SETTING SAG

To get the best performance out of your PODIUM X, it is necessary to adjust the vehicle ride-height or "sag." Sag is how much the shock compresses, or "sags," when you sit on your ATV. As a general rule, your vehicle's sag should be 35% — 45% of full wheel travel. There are many factors that will influence your sag setting and ride height preference, including tire diameter, terrain and riding style. Use the following procedure to accurately measure and set the correct ride-height (sag) for your ATV:



SET THE FRONT AND REAR RIDE HEIGHT (SAG) SIMULTANEOUSLY.

- **STEP 1** Position the bike on a flat surface and clear of any obstacles.
- **STEP 2** Place pieces of cardboard under each wheel. As the suspension is compressed, the front wheels move outward. This is called "scrub." Placing the cardboard under the wheels allows the suspension to move more freely.
- STEP 3 While wearing your normal riding gear, mount the ATV and stand in your normal "standing" riding position, feet in your natural riding position on the foot-pegs, with both hands on the bars.



(NOTE THE CARDBOARD UNDER THE WHEELS)

STEP 4 Aggressively bounce up and down on the quad several times and allow the quad to settle.

DUE TO THE NATURE OF HIGH-PRESSURE SEALS IN AIR SHOCKS, THE SHOCKS MAY REQUIRE AN INITIAL COMPRESSION STROKE TO FULLY LUBRICATE INTERNAL SLIDING SURFACES TO ALLOW FOR SMOOTH OPERATION. THIS IS MOST APPARENT AFTER THE ATV HAS BEEN SITTING FOR A WHILE.

STEP 5 Gently assume a seated position.



STEP 6 Have a friend push down on the front end of the vehicle. While the suspension is compressed, turn the bars back and forth. Turn the bars back straight and have the friend release the front suspension.



STEP 7 While still seated on ATV, have a friend measure the vertical distance from the ground plane to the chassis, under the footpegs (rear frame height) and the distance from the ground plane to the chassis at the front engine mount (front frame height). If your vehicle has a skid plate, measure to the bottom of that.



MEASURING THE FRONT FRAME HEIGHT JUST UNDER THE FRONT MOTOR MOUNT



MEASURING THE REAR FRAME HEIGHT JUST IN FRONT OF THE FOOT PEG

STEP 8 The rear frame height should be between 7"-8" for moto-X use, 8"-9" for cross-country use. The front frame height should be approximately 1/4"-1/2" higher than the rear.

If your ATV is sitting too low in the rear, increase the PODIUM X spring preload [See **ADJUSTING SPRING PRELOAD (SINGLE AND DUAL SPRING)** on the next page], and repeat all the steps above until the desired sag is reached.

ADJUSTING SPRING PRELOAD (SINGLE AND DUAL SPRING)

- **STEP 1** Using a 4mm hex key, loosen the pinch-bolt on the preload ring.
- step 2 a) Turn the preload ring clockwise (when viewed from above) to increase the preload.

b) Turn the preload ring anti-clockwise (when viewed from above) to decrease the preload.

STEP 3 Once you have reached the desired setting, torque the pinch-bolt to lock the ring.



IF YOU ARE ADJUSTING THE SPRING PRELOAD WITH THE SHOCK NOT MOUNTED ON THE ATV, BE SURE TO TURN THE PRELOAD RING A WHOLE NUMBER OF COMPLETE TURNS, MAINTAINING THE SAME ANGULAR ORIENTATION. THIS WILL ENSURE THAT YOU WILL STILL BE ABLE TO ACCESS THE PINCH-BOLT WHEN THE SHOCK IS INSTALLED ON THE ATV.



IF YOU ADJUST YOUR SPRING PRELOAD YOU WILL NEED TO ADJUST YOUR CROSSOVER RING LOCATION ALSO (DUAL SPRING ONLY) TO MAINTAIN THE SAME CROSSOVER POINT. SEE THE SECTION **ADJUSTING SPRING CROSSOVER** ON PAGE 13 FOR DETAILS.

DO NOT SET THE SPRING PRELOAD AT MORE THAN 3/8". EXCESSIVE SPRING PRELOAD MAY RESULT IN COIL-BIND, WHICH COULD POTENTIALLY BE DAMAGING TO THE SHOCK AND SPRINGS. IF YOU REQUIRE MORE THAN 3/8" PRE-LOAD TO REACH THE DESIRED SAG POINT, YOU WILL NEED TO EXCHANGE THE SPRING(S) FOR A HIGHER RATE. PLEASE CONTACT FOX RACING SHOX.

ADJUSTING SPRING CROSSOVER (DUAL SPRING ONLY)

The spring crossover point is an important tuning parameter (shocks with dual springs only). A softer initial spring rate offers improved traction and hook-up (corner speed and acceleration) while a higher spring rate deep into travel helps to resist bottoming on jump landings. As a rough guideline, the spring crossover point should be as deep into travel as possible without experiencing excessive bottoming. The crossover point is defined as a percentage of the total shock travel. The factory setting for spring crossover point is 55%. This means, for example, that for a 5" travel shock the crossover point is at 2.75" (5.0" x 0.55) into the shock travel.

In order to calculate your spring crossover ring placement, you need to know four important pieces of information:

- I) Shock travel (metal-to-metal inches) measure BEFORE installation.
- **II)** Main Spring Rate (lb/in) marked on spring (see changing the springs).
- III) Tender Spring Rate (Ib/in) marked on spring (see changing the springs).
- **IV)** Desired crossover point (as a percentage).

The shock travel is the exposed length of the shaft (including the bumpstop) when the shock is fully extended. It may be easiest to measure before you install the shock.



PODIUM X ATV SHOCKS ARE MANUFACTURED IN 0.1" TRAVEL INCREMENTS. THEREFORE, YOUR SHOCK TRAVEL WILL BE 4.7, 4.8 OR 4.9 INCHES.



SOME SHOCKS USE EXTERNAL SPACERS BELOW THE BUMP-STOP TO LIMIT TRAVEL. DO NOT INCLUDE THE SPACER LENGTH AS PART OF THE TRAVEL.



THE CROSSOVER POINT IS A TUNABLE PARAMETER. IT SHOULD BE BETWEEN 45% TO 65%.

To set the crossover point:

- STEP 1 Set the spring preload as described in ADJUSTING THE SPRING PRELOAD on page 12.
- **STEP 2** Once you have established the correct preload, mount the ATV on a stand to keep the rear wheels off the ground. The shock should be fully extended.



STEP 3 Using a 2.5mm hex key, loosen the set screw retaining the crossover ring.

STEP 4	Determine the spring	correction factor	using the	following table:
--------	----------------------	-------------------	-----------	------------------

SPR	RING	Main Spring Rate (lb/in)												
CORRI FAC	ECTION TOR	200	225	250	275	300	325	350	375	400	425	450	475	500
Ê	500	0.286	0.310	0.333	0.355	0.375	0.394	0.412	0.429	0.444	0.459	0.474	0.487	0.500
(lb/	600	0.250	0.273	0.294	0.314	0.333	0.351	0.368	0.385	0.400	0.415	0.429	0.442	0.455
g Rate	700	0.222	0.243	0.263	0.282	0.300	0.317	0.333	0.349	0.364	0.378	0.391	0.404	0.417
Sprin	800	0.200	0.220	0.238	0.256	0.273	0.289	0.304	0.319	0.333	0.347	0.360	0.373	0.385
nder	900	0.182	0.200	0.217	0.234	0.250	0.265	0.280	0.294	0.308	0.321	0.333	0.345	0.357
P	1000	0.167	0.184	0.200	0.216	0.231	0.245	0.259	0.273	0.286	0.298	0.310	0.322	0.333

STEP 5 Use the following formula to calculate crossover ring placement:

CROSSOVER RING PLACEMENT = SHAFT TRAVEL (IN.) X CROSSOVER POINT X SPRING CORRECTION FACTOR
A MDI E-

EXAMPLE:

A **5.2**" travel shock with **375** lb/in main spring and **800** lb/in tender spring. The crossover point is set at **55%**.

From the table above, the spring correction factor is **0.319**.

From the above formula, the crossover ring placement value is = $5.2 \times 0.55 \times 0.319 = 0.912$ inches



IN THE ABOVE EXAMPLE, 55% IS WRITTEN AS 0.55.

STEP 6 Adjust the crossover ring (as shown below) so that its distance from the spring coupler is equal to the crossover ring placement value calculated in step 5.



CROSSOVER RING LOCATION

STEP 7 Remove the ATV from the stand.



YOU MAY NEED A SMALL, FLEXIBLE RULER OR MEASURING DEVICE TO ACCURATELY DETERMINE THE CROSSOVER RING LOCATION. ANOTHER USEFUL WAY OF MEASURING IS TO COUNT THE THREADS ON THE BODY (THE THREAD PITCH ON THE BODY IS 14 THREADS PER INCH). IF YOU KNOW THE CROSSOVER RING LOCATION, MULTIPLY BY 14 TO GET THE NUMBER OF THREADS BETWEEN THE SPRING COUPLER AND CROSSOVER RING. IN THE EXAMPLE ABOVE, 0.912 INCHES = 0.912 X 14 = 12.8 THREADS.



APPLYING EXCESSIVE TORQUE TO THE CROSSOVER RING SET SCREW WILL RESULT IN DEFORMATION OF THE SHOCK BODY AND CROSSOVER RING. THIS SET SCREW ONLY NEEDS VERY LIGHT (TWO-FINGER) TORQUE.



CHANGING THE SPRING PRELOAD, TENDER OR MAIN SPRING FREE-LENGTH OR RATE WILL MEAN THAT YOU NEED TO RESET THE CROSSOVER RING PLACEMENT.

TUNING THE PODIUM X

GENERAL GUIDELINES

Go out and ride. Tune your senses to what the ATV's rear end is doing. Sometimes you know the ATV isn't handling quite right but, for example, it may be hard to tell whether the problem is too little rebound damping or too much compression damping. Sometimes the difference in "feel" is subtle.

Some of the distinctions are minute. If the damping doesn't seem quite right, make your best guess as to what change will help, then try it. If handling doesn't improve, make another change in the opposite direction. Keep experimenting like this until the ride feels best.

It is common practice for riders to "test" shock absorber damping by pushing down on the back of the ATV and observe the shock response. This test is useful, but very limited. You should be aware that this test only involves low-speed damping action. It will tell you nothing about shock response at medium and high shaft speeds.

TUNING RECOMMENDATIONS

The percentage change in damping when going from one click to the next click is fairly small. This is so you can really fine tune your shock. A one click change is hard to notice. Therefore, FOX recommends making changes of two clicks at a time. For example, if after testing you feel compression is too soft, try a two-click change (clockwise on compression adjuster). If that feels just right, then you've got it. On the other hand, if that now feels a little too stiff, then you've got it "bracketed"; go back one click (counterclockwise) and it should now feel just right.

These recommendations apply to both rebound and compression damping.



IF YOU WANT TO KNOW YOUR CURRENT SETTING, BOTH ADJUSTERS SHOULD BE BASELINED BY TURNING THEM CLOCKWISE AND COUNTING THE NUMBER OF CLICKS UNTIL THE ADJUSTER LIGHTLY BOTTOMS. DO NOT OVERTIGHTEN. COMPRESSION AND REBOUND ADJUSTMENT SETTINGS ARE COUNTED AS CLICKS OUT FROM FULL IN, OR CLOCKWISE, POSITION.

SPRING FORCE

At this point you have set the sag of your vehicle by adjusting the preload ring. Consequently, your spring force should be near its optimal setting. If you feel that the rear of the vehicle is too low as you are riding, increase preload; if the vehicle is too high, decrease preload.



NEVER INCREASE PRELOAD MORE THAN 3/8". IF YOU NEED MORE SPRING FORCE, YOU WILL NEED TO GO TO THE NEXT HIGHER SPRING RATE.

AFTER THE PRELOAD RING ENGAGES THE SPRING, TURN THE PRELOAD RING CLOCKWISE ONE TURN. IF THE PRELOAD RING NEEDS TO TURNED COUNTERCLOCKWISE FROM THIS POINT TO ACHIEVE PROPER SPRING FORCE, YOU WILL NEED TO OBTAIN A LOWER RATE SPRING.

CROSSOVER POINT

The crossover point should be between 45% and 65%; the default setting is 55%.

If you want increased bottoming resistance, decrease the crossover point (towards 45%).

If you are not bottoming and want decreased bottoming resistance, increase the crossover point (towards 65%).

Important note: setting a crossover point outside of the recommended range (45% - 65%) may result in spring coil-bind and damage to the shock and/or springs.

If you feel that you are crashing through your available travel too quickly on big bumps, try decreasing the crossover point; conversely, if you feel that you are not fully utilizing your available travel, try increasing the crossover point.



APPLYING EXCESSIVE TORQUE TO THE CROSSOVER RING SET SCREW WILL RESULT IN DEFORMATION OF THE SHOCK BODY AND CROSSOVER RING. THIS SET SCREW ONLY NEEDS VERY LIGHT (TWO-FINGER) TORQUE.

REBOUND DAMPING

Rebound damping controls the rate at which the shock returns after it has been compressed. The proper rebound setting is a personal preference, and changes with rider weight, riding style and conditions. A rule of thumb is that rebound should be as fast as possible without kicking back and pushing the rider off the saddle.

The rebound screw (see picture on right) is located on the shaft end of the shock, and is adjusted using a screwdriver.



REBOUND ADJUSTER SCREW

For slower rebound, use a screwdriver to turn the adjuster screw clockwise.

For faster rebound, use a screwdriver to turn the adjuster screw counterclockwise.

REBOUND DAMPING TROUBLESHOOTING				
Symptom	Remedy			
- Bucking - Tops out too hard	Set slower rebound			
Packing in repetitive bumpsChatter	Set faster rebound			

Symptoms of Too Much Rebound Damping

Rear end tends to washout or slideout on hard-packed sweeper turns with small bumps, especially on off-camber "washboard" turns. Rear end skips too much when braking on "washboard" sections and does not develop good braking power. Poor rear wheel traction when accelerating over small repetitive bumps (washboard) sections.

Rear end gets harsh and hard to control when hitting series of medium or large rolling bumps at high speed. First few bumps in the series don't seem bad, but after that the rear end gets harsh and starts jumping around.



TOO MUCH DAMPING PREVENTS THE WHEEL FROM EXTENDING QUICKLY ENOUGH BEFORE HITTING THE NEXT BUMP (PACKING). AFTER THE FIFTH OR SIXTH BUMP, YOU MAY HAVE MINIMAL TRAVEL LEFT.

Symptoms of Too Little Rebound Damping

These symptoms are similar to the ones in the previous section: tendency to slideout on washboard turns and poor braking over washboard sections. The critical difference in this case is that the back of the ATV is bouncing up and down too much, whereas with too much damping it had poor traction. Too much kicking up especially when braking on downhill sections with small bumps or washboard surface.

Rear end kicks up when hitting large rolling-type bumps at high speeds. Kick-up is especially noticeable on steep downhills with deep rolling bumps. Also, the rear end of the ATV may kick up after landing a jump.



THE SHOCK WILL EXTEND TOO QUICKLY IF THERE IS NOT ENOUGH DAMPING TO CONTROL THE SPRING EXTENSION FORCE.

TUNING SUGGESTION: Once you are comfortable riding the ATV and would like to fine tune the rebound damping setting, find a table-top jump that you can hit consistently and safely, landing as flat as possible. As a general rule you want as little rebound damping as possible so that the suspension returns quickly, but still enough rebound damping that the rear of the ATV does not oscillate upon landing. The rear of your ATV should return quickly to ride-height and then remain still. If the rear suspension continues to oscillate several times after landing, try increasing rebound damping (slower). If the suspension does not oscillate after landing, try decreasing rebound damping (faster). This procedure should allow you to close in (or bracket) on the desired rebound damping setting.

COMPRESSION DAMPING

Compression damping controls the rate at which the shock compresses when it encounters a bump. The proper compression setting is a personal preference and changes with rider weight, riding style and conditions.

The compression adjuster knob (see picture on right) is located on the reservoir.

For more compression, turn the compression adjuster knob clockwise.



COMPRESSION ADJUSTER KNOB

For less compression, turn the compression adjuster knob counterclockwise.

P/N: 605-00-061, REV. E | PODIUM X SHOCK OWNER'S MANUAL

COMPRESSION DAMPING TROUBLESHOOTING			
Symptom	Remedy		
- Rigid, harsh ride	Set less compression		
- Bottoms-out easily	Set more compression		

Symptoms of Too Much Compression Damping

The rear end is harsh over small bumps. Shock seems to stay almost rigid instead of absorbing bumps. Especially noticeable on downhill bumps.

The rear end is harsh at high speeds over large or medium square-edged bumps. The shock stays too rigid and does not use enough travel to absorb bumps. The shock rarely or never seems to bottom-out, even off the biggest jumps.

Symptoms of Too Little Compression Damping

Shock bottoms-out on medium-sized bumps and the bottom of deep smooth gullies, or rising portions of deep rolling sand whoops.

At high speed the rear end takes medium square-edged bumps smoothly, but bottoms out too easily on larger bumps. Bottoms out too easily off jumps and at high speeds over large square-edged bumps, kicking up the rear end violently.

MAINTAINING THE PODIUM X

Proper inspection and maintenance procedures are crucial to maintaining the high performance and durability of your PODIUM X shock. Proper inspection and maintenance now prevent headaches and equipment failure later, not to mention lackluster performance at the races and your absence from the podium.

You should clean your PODIUM X before and after every ride for optimal performance. Use a mild detergent and rag to clean off any and all debris from your shock. Be sure to clean the area located under the bottom-out bumper as well. Avoid using a pressure washer directly on the shock as this can drive dirt past the seals.

Along with properly cleaning your shock, you should also inspect the following areas before every ride. Consult the shock picture on the next page for the location of each inspection location:

- **#1:** Check the reducers and o-rings for excessive wear or damage.
- **#2:** Check the reservoir for any signs of damage.
- #3: Check the piston shaft for any signs of leakage or damage.
- **#4:** Check the spring and shock body for any signs of damage.
- **#1 & #5:** Check the ATV's and the shock's mounting points and make sure all bolts are properly fastened.



YOUR PODIUM X SHOCK IS CHARGED WITH NITROGEN. SPECIAL EQUIPMENT IS NECESSARY TO ACCESS AND ALTER THE NITROGEN CHARGE.

SHOCK REBUILD

Just as the oil in your engine breaks down with time and must be replaced, the oil in your PODIUM X shock must be serviced periodically. The service interval depends on how frequently and severely the ATV is ridden. As a guideline, if you race hard every weekend you may want to change the oil in your shock at least once during the season. Otherwise, it is generally recommended to service the shock in the off-season. FOX Racing Shox or an Authorized Factory Service Center can perform this procedure.

SHOCK REBUILD REQUIRES SPECIALIZED TOOLS FOR DISASSEMBLY AND RE-ASSEMBLY. IT IS ESSENTIAL THAT THIS SERVICE BE PERFORMED BY FOX RACING SHOX OR A QUALIFIED PROFESSIONAL SHOCK TECHNICIAN. THE FOLLOWING ITEMS ARE REQUIRED:



QUICK SETUP CHECKLIST

FOX recommends that you read and understand this manual COMPLETELY before installing your new FOX PODIUM X shock and riding your ATV.

For operator safety, please follow this important checklist as an absolute minimum BEFORE riding your ATV:

Mounting of the PODIUM X:

- Correct reducers, o-rings, bolts and torque settings.
- Hose routing and adequate clearance to frame and exhaust.
- Remote reservoir correctly positioned and secured.
- See pages 7 8 for more detail.

Adjusting the spring preload to give the correct front and rear ride-height (sag):

- Sitting on the vehicle, the front ground-to-frame clearance should be 1/4 to 1/2 inch higher than the rear ground-to-frame clearance; for moto-X the rear ground clearance should be 7-8 inches; for cross-country, the rear ground clearance should be 8-9 inches.
- Do NOT exceed 3/8-inch preload on the PODIUM X shock—excessive preload will coil-bind the spring(s) and may cause damage and/or injury.
- Dual spring shocks should have the correct crossover ring location, such that the crossover occurs at between 45% - 65% of full travel. Incorrect crossover ring location will coil-bind the spring(s) and may cause damage and/or injury.
- See pages 12 for more detail.

Setting the external REBOUND adjuster:

- Turn the rebound adjuster fully closed (clockwise) and open the adjuster the correct number of clicks counterclockwise. Check the setup sheet supplied with your shock(s) for the correct number of clicks.
- See pages 18 19 for more detail.

Setting the external COMPRESSION adjuster:

- Turn the compression adjuster fully closed (clockwise) and open the adjuster the correct number of clicks counterclockwise.
- Check the setup sheet supplied with your shock(s) for correct number of clicks.
- See pages 19 20 for more detail.

TUNING NOTES:

QUICK REFERENCE GUIDE

PODIUM X

terms used	SUSPENSION > Compression: downward travel of the suspension. Actions that move the endpoints of the shock closer together. > Compression: downward travel of the suspension. Actions that move the endpoints of the shock closer together. > Compression: downward travel of the suspension or shock without an IFP (Internal Floating Pitcon) separating the oil and nitrogen. > Frame clearance: distance between the frame and other moving parts, like the shock. > Negative travel: distance the suspension or shock extends from the static ride height. Also referred to as 'free sag.' > Preload: initial force on the spring. Preload is used to adjust rider sag. > Rebound: force required to extend the shock or suspension. Can also refer to the extending action of the suspension. > Rebound: force required to extend the shock or suspension. Can also refer to the extends after being compressed. > Rebound damping: oil damping resistance that controls the rate at which the shock extends after being compressed. > Rebound: force required to compresse with the rider sitting on the ATV in a normal riding position. > Free sag: amount that the ATV 'sits' into travel. Usually measured from the ground to a point on the frame, or as shock stroke, and without a rider on the ATV. > Spring rate: force required to compresses, as measured from eye-to-eye. > Valving: refers to the combination of shims or damping valves on the piston face used to achieve a specific ride characteristic. > Wheel travel: distance the wheel moves when the suspension reaches			
service intervals	> Before every ride: Wipe mud and debris off shock exterior > Monthly: Clean and inspect your shock. > Annually: Clean and inspect your shock. See the MAINTAINING THE PODIL Every ride season: Shock rebuild by a FOX Certified Technician or FCC	JM X section on pa X Racing Shox	age 21 of this manual.	
tools & supplies	> PODIUM X Rebuild Kit 803-00-230 > Enc > FOX Light Racing Oil 025-06-000	I Cap / IFP Tool	398-00-255	
contact info	FOX Racing Shox 130 Hangar Way Watsonville, CA 95076, USA Phone: 1831.274.6500 North America: 1800.FOX.SHOX (369.7469) Fax: 1.831.768.7026 E-mail: atV@foxracingshox.com /Website: www.foxracingshox.com Business hours: Monday - Friday 8 a.m 5 p.m. PST	method of payment & shipping	Visa, MasterCard, Cashier's Check FOX Racing Shox uses UPS Ground Service within the USA.	
disclaimer	FOX Racing Shox is not responsible for any damages to you or other use of your PODIUM X shock. In the event that your shock breaks or m liability beyond the repair or replacement of your shock pursuant to th of this manual.	s arising from ric halfunctions, FOX he terms outlined	ling, transporting, or other Racing Shox shall have no in the warranty provisions	
warranty policy	The factory warranty period for your shock is one year (two years for c purchase of the shock or ATV. A copy of the original purchase receipt m for warranty service. Warranty is at the full discretion of FOX Racing Sho workmaship. Warranty duration and laws may vary from state to state Parts, components and assemblies subject to normal wear and tear are FOX Racing Shox reserves the right to all final warranty or non-warrant	ountries in the El oust accompany a ox and will cover o and/or country t not covered und y decisions.	J) from the original date of ny shock being considered nly defective materials and o country. er this warranty.	

valving guarantee	If it is determined that a PODIUM X requires a valving change within the first 90 days of ownership, FOX will perform the re-valve at no charge for the original consumer. The consumer is required to follow the Service Policy procedure below and is responsible for all shipping costs to and from FOX Racing Shox. Unless other- wise specified, FOX Racing Shox will return ship the shock(s) via UPS Ground Service.
service policy	 > FOX Racing Shox offers 5-business day turnaround, which may vary. > Obtain an RA (Return Authorization) number and shipping address from FOX Racing Shox at 800.FOX. SHOX. Outside the USA, contact the appropriate International Service Center. > Mark the RA number and Return Address clearly on the outside of the package and send to FOX Racing Shox (see Contact Info above) or your International Service Center with shipping charges pre-paid by the sender. > Proof-of-purchase is required for warranty consideration. > Include a description of the problem, ATV information (manufacturer, year and model), type of FOX product and return address with daytime phone number.
specific exclusions from warranty	 > Parts replaced due to normal wear and tear and/or routine maintenance > Parts subject to normal wear and tear and/or routine maintenance > Bushings > Seals (after the 90-day seal warranty period expires) > Suspension fluids > Crash damage
general exclusions from warranty	 > Installation of parts or accessories not qualitatively equivalent to genuine FOX Racing Shox parts. > Abnormal strain, neglect, abuse and/or misuse > Accident and/or collision damage > Modification of original parts > Lack of proper maintenance > Shipping damages or loss (purchase of full value shipping insurance is recommended) > Damage to interior or exterior caused by rocks, crashes or improper installation > Oil changes or service not performed by FOX Racing Shox or an Authorized Service Center



WWW.FOXRACINGSHOX.COM