




ZERO C2 - ZERO RC2


Mounting Orientation for Kits
853-99-012, 853-99-120

IMPORTANT: Orienting the shocks improperly can cause interference with the action of the rear suspension, resulting in possible loss of control and rider injury or death. If you do not possess the tools or technical knowledge to mount your FOX shocks, have it performed by an authorized dealer. Remove the rear suspension from the snowmobile. Note limiter straps settings and the rear spring preload. Mount your FOX shocks as pictured below.

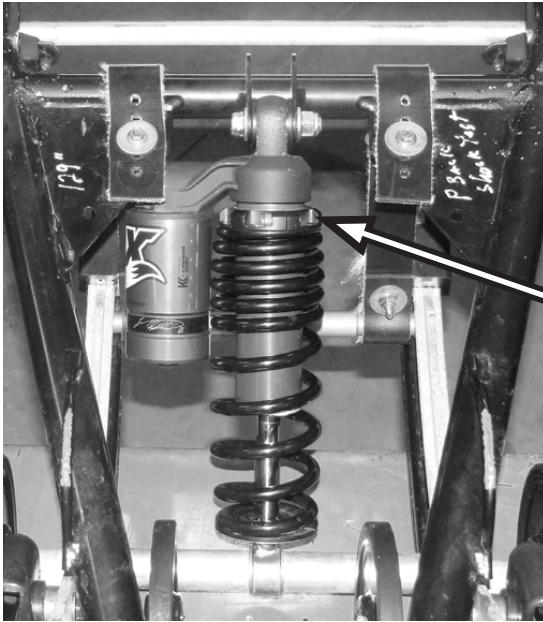

**REBOUND
ADJUSTER**
Preset at 12
Clicks out

**SPRING
PRELOAD
ADJUSTER**

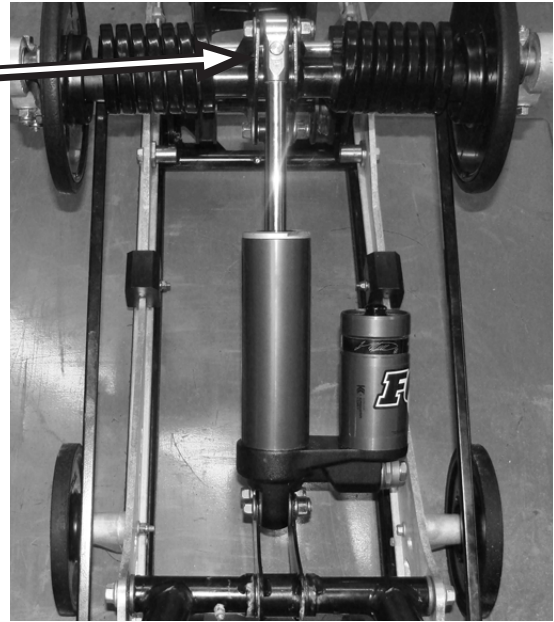

ZERO C2 Low and High Speed Adjusters (DSC) are set at 12 clicks out from bottom. Each has a total of 24 clicks out from bottom. Use a flat blade screwdriver to adjust the low speed compression. Use a 17mm hex socket to adjust the high speed compression. Spring has 1/4" preload.

ZERO RC2 Reservoir is positioned below the shock with the Rebound Adjuster facing up when connected to the rear arm. Low and High Speed Adjusters (DSC) Each have 24 clicks out from bottom.



Reset limiter straps and rear spring preload to noted settings. Install the rear suspension.
Torque all bolts and mounting hardware to manufacturer's specifications.
Adjust the track tension to the manufacturer's specifications.