




FLOAT 3 - FLOAT 3 EVOL R

Mounting Orientation for Kits
853-99-115, 853-99-119

IMPORTANT: Orienting the shocks improperly can cause interference with the action of the rear suspension resulting in possible loss of control and rider injury or death. If you do not possess the tools or technical knowledge to mount your FOX shocks, have it performed by an authorized dealer.

Remove the rear suspension from the snowmobile. Mount your FOX shocks as pictured below. Torque all bolts and mounting hardware to the manufacturer's specifications. When making air pressure adjustments to the rear air shocks, always have the shocks fully extended with no weight on the vehicle. Adjusting the EVOL air chamber 1st and then the MAIN air chamber 2nd on the rear shock. Front arm shock should be extended as far as the limiters allow. FOX FLOAT 3 shocks air chambers do come pre-pressurized, it is recommended that you check air pressure on initial setup before riding.

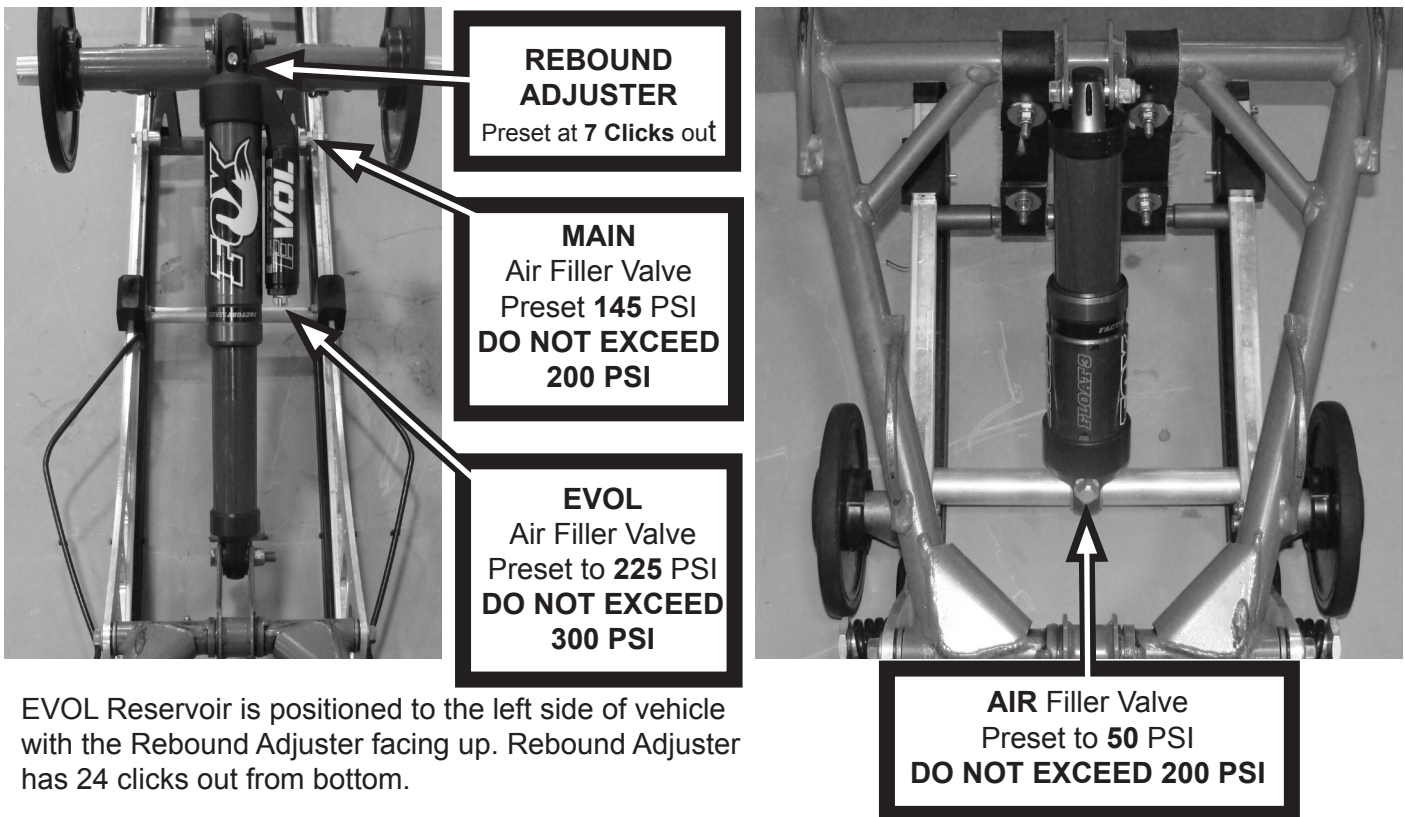

EVOL Reservoir is positioned to the left side of vehicle with the Rebound Adjuster facing up. Rebound Adjuster has 24 clicks out from bottom.



Install the rear suspension. Adjust the track tension to the manufactures specifications. Air pressures should always be set at ambient air temperature anticipated during riding conditions.

Completed Rear Suspension