


1 APPLY THIN LAYER OF SLICK HONEY TO INSTALL O-RING ON AIR VALVE.
APPLY THIN LAYER OF FLOAT FLUID ON INSTALLED AIR VALVE O-RING,
PRIOR TO AIR VALVE INSTALLATION.

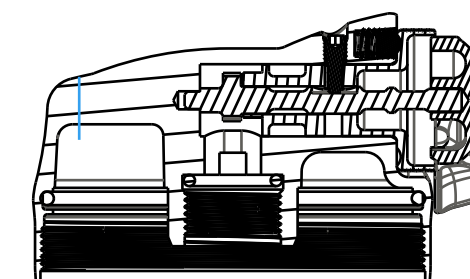

SECTION A-A

- PROPRIETARY -
THIS DOCUMENT CONTAINS CONFIDENTIAL, PROPRIETARY INFORMATION
THAT IS FOX PROPERTY. DO NOT DISCLOSE TO OR DUPLICATE
FOR OTHERS EXCEPT AS AUTHORIZED BY FOX.

		FOX Factory, Inc. 130 Hangar Way, Watsonville, CA 95076 USA Ph 831-768-1100 Fax 831-768-9312
TITLE Eyelet Assy: 2017, Trek TSS, Reaktiv, LV, Trunion		
SIZE C	DWG. NO. 808-17-327-KIT	SHEET 1 OF 1
PLOT SCALE .00:1		ProE ASSEM