


ASSEMBLY INSTRUCTIONS:

1. ASSEMBLE DAMPER SHAFT ASSEMBLY TO PRESSURE TUBE.
2. FILL CARTRIDGE WITH OIL.
3. STROKE DAMPER SHAFT 5X, THEN TOP OUT.
4. FILL OIL HEIGHT TO PRESSURE TUBE BLEED HOLE.
5. TOPCAP ASSY (WITHOUT COMPRESSION NEEDLE)
  - A. SLOWLY PUSH INTO PRESSURE TUBE AND ENGAGE THREADS.
  - B. ROTATE TO ENGAGE 1-2 THREADS.
6. DIP COMPRESSION NEEDLE AND O-RING IN OIL.
7. THREAD COMPRESSION NEEDLE 3-4 TURNS.
8. TORQUE TOPCAP ASSEMBLY.

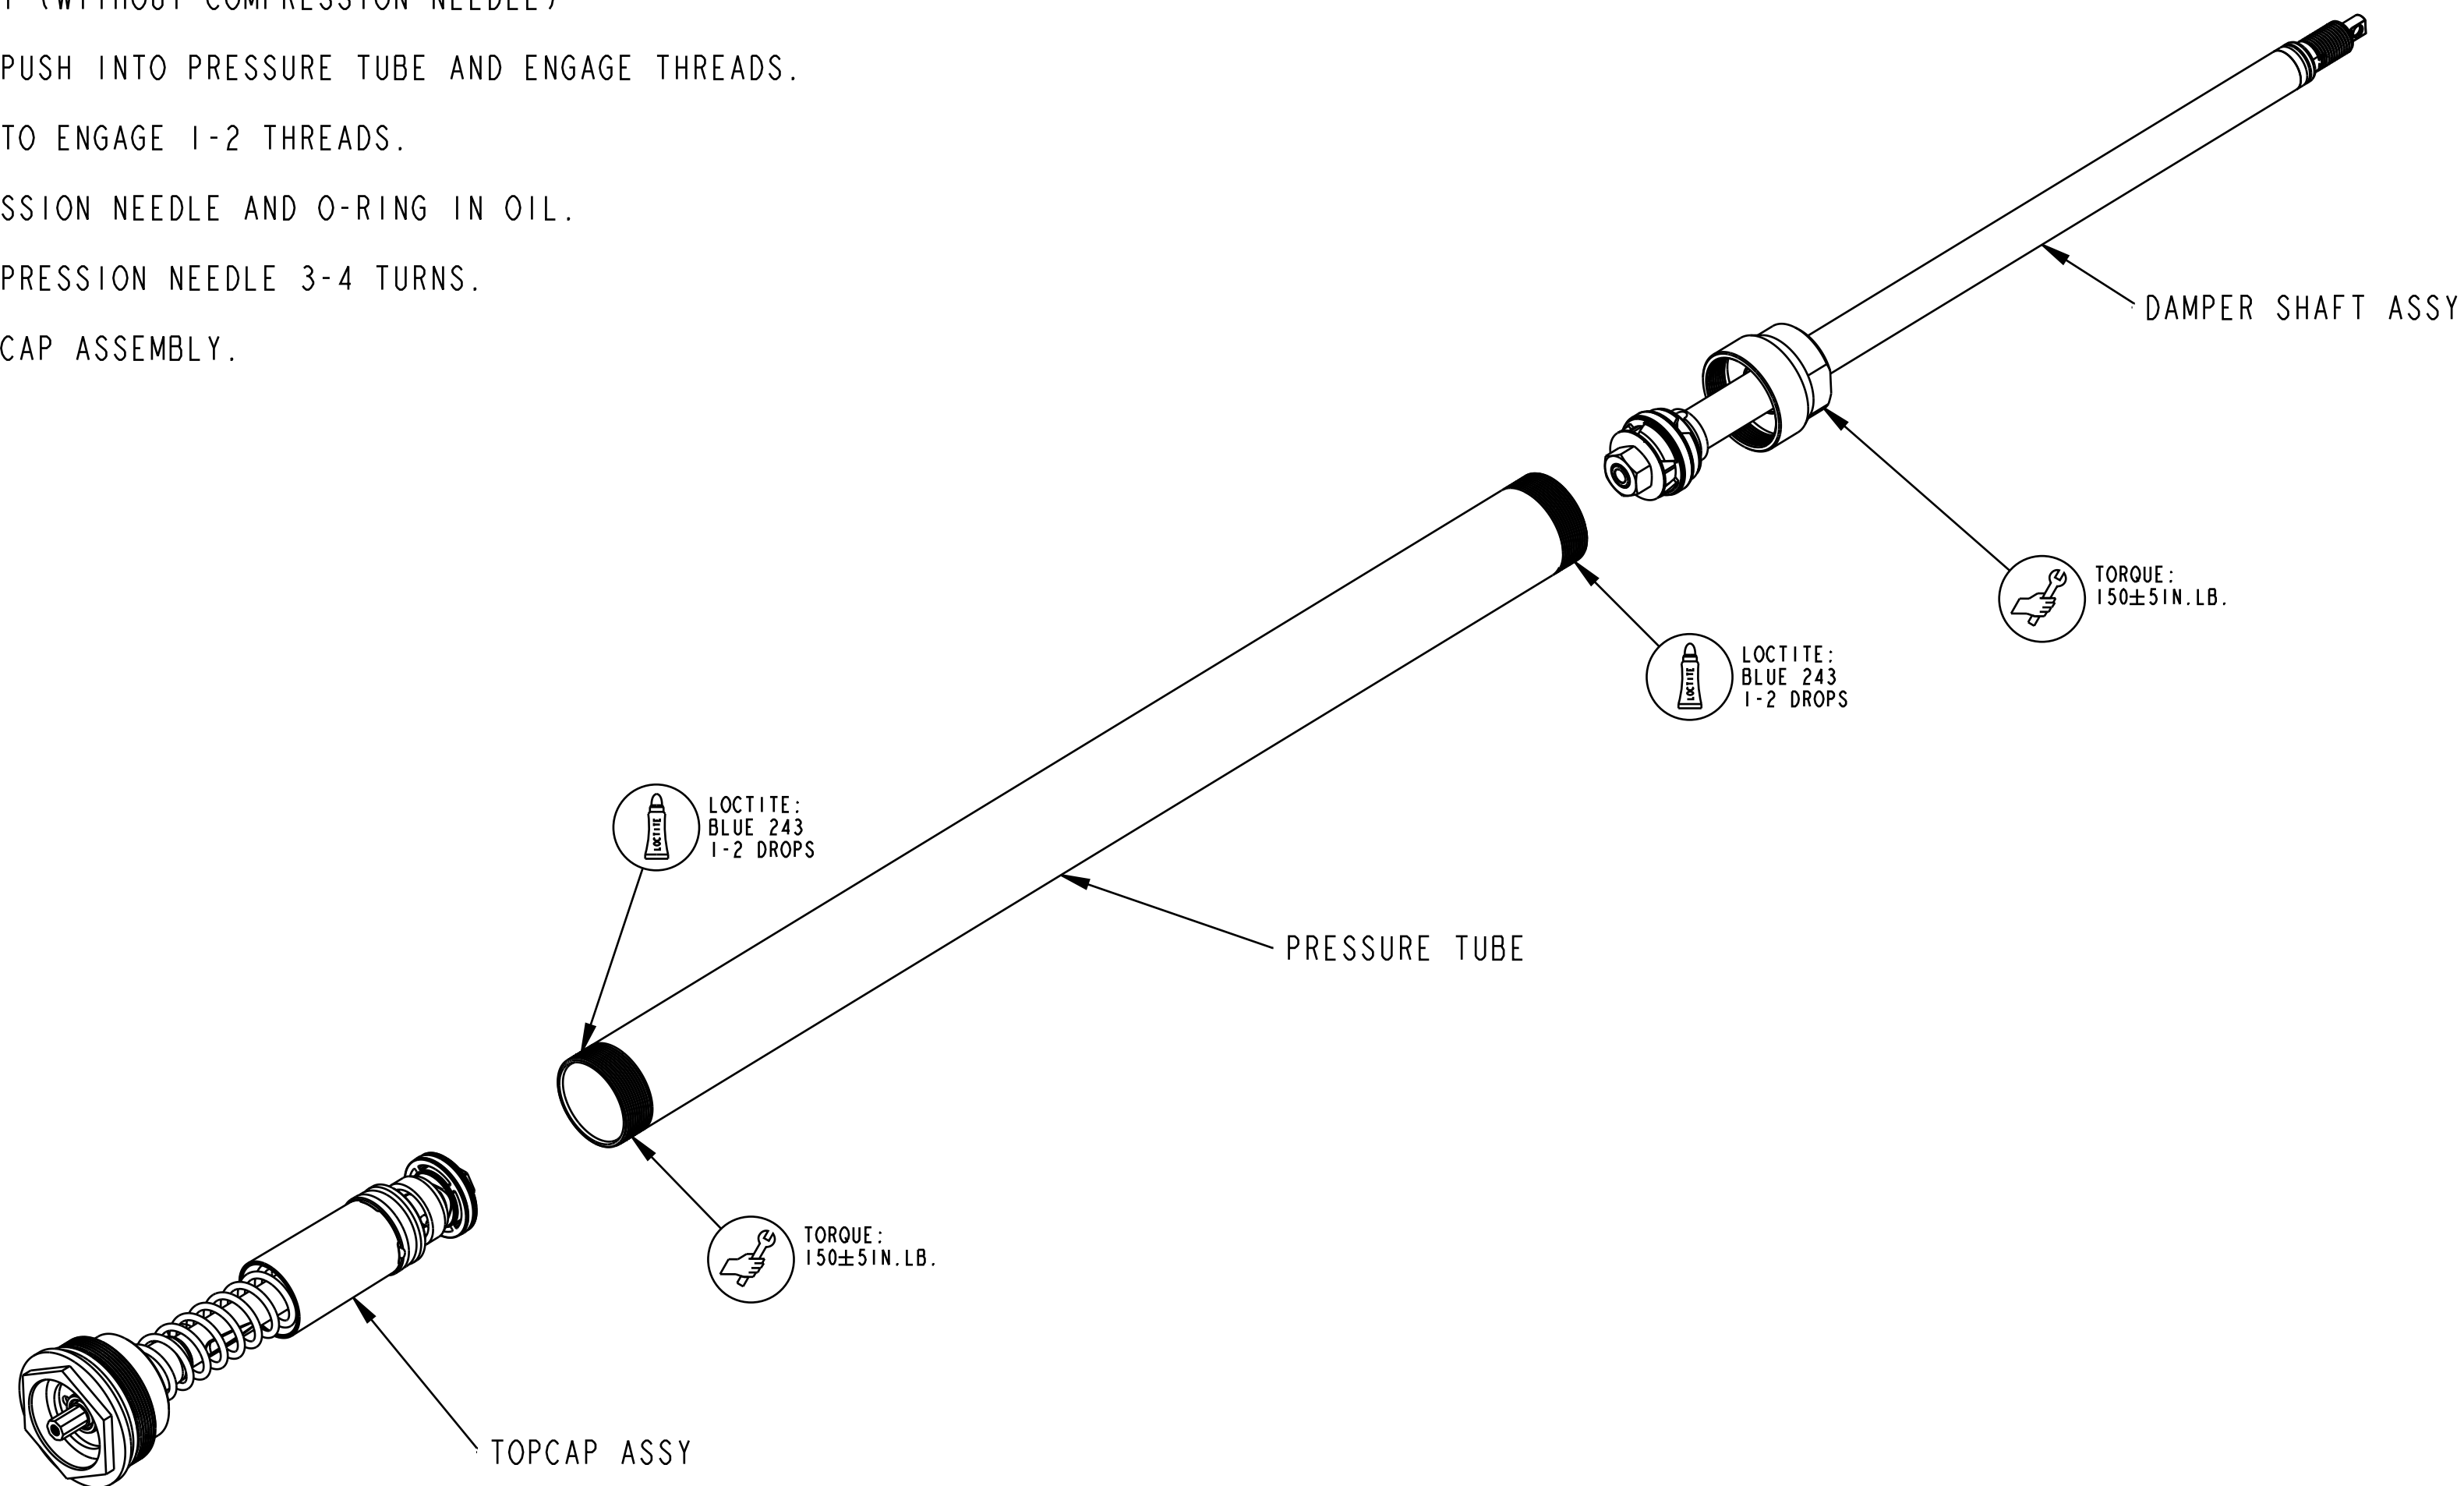

**FOX** **FOX Factory, Inc.** Ph 831-768-1100  
 130 Hangar Way, Watsonville, CA 95076 USA Fax 831-768-9312

TITLE  
**CARTRIDGE, 34**  
**2017 GRIP**

SIZE DWG. NO.  
**C**

PLOT SCALE 0.75:1 | SHEET 1 OF 1

- PROPRIETARY -  
 THIS DOCUMENT CONTAINS CONFIDENTIAL, PROPRIETARY INFORMATION  
 THAT IS FOX PROPERTY. DO NOT DISCLOSE TO OR DUPLICATE  
 FOR OTHERS EXCEPT AS AUTHORIZED BY FOX.